

MANU0027-IP0001

Sample ID: BIA251107S0238
 Strain: Tar Pit x Oilspill Infused Preroll
 Harvest Lot: MANU0027-IP0001
 Matrix: Plant
 Type: Enhanced/Infused Preroll
 Sample Size: 3 units
 Lot#:

Produced:
 Collected:
 Received: 11/07/2025
 Completed: 11/17/2025
 Batch#:

Client
Northeast Kingdom Hemp
 Lic. #
 Barton, VT 05822



Summary

Test	Date Tested	Result
Sample		Complete
Cannabinoids	11/12/2025	Complete
Moisture	11/10/2025	7.80% - Complete
Water Activity	11/10/2025	0.324 aw - Complete
Terpenes	11/10/2025	Complete

Cannabinoids

Completed

35.42% Total THC				ND Total CBD				39.33% Total Cannabinoids			
Analyte	LOQ	Mass	Mass	Analyte	LOQ	Mass	Mass	Analyte	LOQ	Mass	Mass
	%	%	mg/g		%	%	mg/g		%	%	mg/g
CBDVa	0.0000	<LOQ	<LOQ	CBCVa	0.0000	<LOQ	<LOQ	CBDVa	0.0000	<LOQ	<LOQ
CBDV	0.0000	<LOQ	<LOQ	CBNa	0.0000	0.13	1.3	CBDV	0.0000	<LOQ	<LOQ
CBDa	0.0001	<LOQ	<LOQ	Δ9-THC	0.0001	22.50	225.0	CBDa	0.0001	<LOQ	<LOQ
CBGa	0.0001	0.72	7.2	Δ8-THC	0.0000	<LOQ	<LOQ	CBGa	0.0001	0.72	7.2
CBG	0.0001	0.52	5.2	Δ10-THC*	0.0000	<LOQ	<LOQ	CBG	0.0001	0.52	5.2
CBD	0.0001	<LOQ	<LOQ	CBL	0.0001	<LOQ	<LOQ	CBD	0.0001	<LOQ	<LOQ
THCV	0.0000	<LOQ	<LOQ	CBC	0.0000	0.42	4.2	THCV	0.0000	<LOQ	<LOQ
CBLV	0.0000	<LOQ	<LOQ	THCa	0.0001	14.73	147.3	CBLV	0.0000	<LOQ	<LOQ
CBCV	0.0000	<LOQ	<LOQ	CBCa	0.0001	0.32	3.2	CBCV	0.0000	<LOQ	<LOQ
THCVa	0.0000	<LOQ	<LOQ	CBLa	0.0001	<LOQ	<LOQ	THCVa	0.0000	<LOQ	<LOQ
CBN	0.0001	<LOQ	<LOQ	Total THC		35.42	354.19	CBN	0.0001	<LOQ	<LOQ
				Total CBD		ND	ND				
				Total		39.33	393.29				

Analyst: 052

Cannabinoids Methodology: High Performance Liquid Chromatography (HPLC) using PerkinElmer FLEXAR™ with Photo Diode Array Detector (PDA)

Total CBD and total THC are calculated values, to account for assumed decarboxylation from the acid form (THCA or CBDA) to the neutral form, causing weight loss of the acid group. These values are calculated as follows:

$$\text{Total THC} = (\text{THCA} \times 0.877) + \Delta 9\text{-THC}$$

$$\text{Total CBD} = (\text{CBDA} \times 0.877) + \text{CBD Reagent}$$

Blanks: < LOQs for all analytes

LOQ = The lowest quantity that this method can reliably detect. Any cannabinoid that was not detected is assumed to be less than the stated LOQ (<LOQ).

All results reflect dry weight of material, based on % moisture of the sample.

Measurement of Uncertainty (MU): the parameter, associated with the result of a measurement, that characterizes the dispersion of the values that could reasonably be attributed to the

particular quantity subject to measurement. Δ9-THC MU = ±0.005% Total THC MU = ±0.007%

All other cannabinoid MU values are available upon request.

All moisture and water activity analysis is determined by dewpoint measurement using an AQUALAB water activity meter.

*The result is the sum of delta-10 isomers.




 Luke Emerson-Mason
 Laboratory Director
 11/17/2025

 Confident LIMS
 All Rights Reserved
coa.support@confidentlims.com
 (866) 506-5866
www.confidentlims.com


MANU0027-IP0001

Sample ID: BIA251107S0238
Strain: Tar Pit x Oilspill Infused Preroll
Harvest Lot: MANU0027-IP0001
Matrix: Plant
Type: Enhanced/Infused Preroll
Sample Size: 3 units
Lot#:

Produced:
Collected:
Received: 11/07/2025
Completed: 11/17/2025
Batch#:


Client:
Northeast Kingdom Hemp
Lic. #
 Barton, VT 05822

Terpenes

Completed

Analyte	LOQ	Results	Results
	mg/g	mg/g	%
β-Myrcene	0.010	2.757	0.276
β-Caryophyllene	0.010	2.597	0.260
Limonene	0.010	1.648	0.165
α-Pinene	0.010	1.606	0.161
Ocimene	0.010	1.077	0.108
α-Humulene	0.010	0.945	0.094
Linalool	0.010	0.681	0.068
β-Pinene	0.010	0.671	0.067
Eucalyptol	0.010	0.198	0.020
Terpinolene	0.010	0.085	0.009
α-Bisabolol	0.010	0.060	0.006
Camphene	0.010	0.043	0.004
γ-Terpinene	0.010	0.036	0.004
α-Terpinene	0.010	0.025	0.003
3-Carene	0.010	0.017	0.002
Caryophyllene Oxide	0.010	0.015	0.001
cis-Nerolidol	0.010	<LOQ	<LOQ
Geraniol	0.010	<LOQ	<LOQ
Guaiol	0.010	<LOQ	<LOQ
Isopulegol	0.010	<LOQ	<LOQ
p-Cymene	0.010	<LOQ	<LOQ
trans-Nerolidol	0.010	<LOQ	<LOQ
Total		12.462	1.246

Primary Aromas

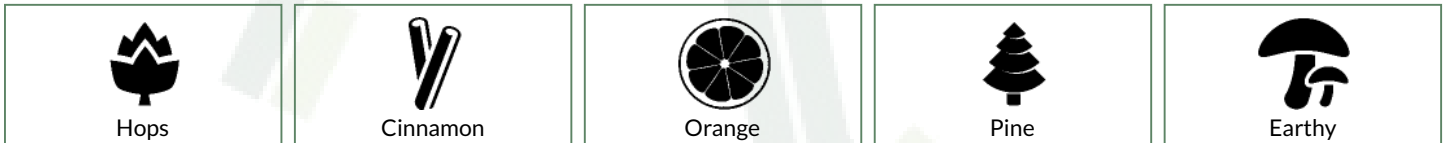

Analyst: 052

LOQ = The lowest quantity this method can reliably detect. Any terpene that was not detected is assumed to be less than the stated LOQ (<LOQ).

Terpene Methodology: Headspace Sampler, Gas Chromatography-Mass Spectrometry (GC-MS), using Perkin Elmer Clarus® SQ8 GC MS

Reagent Blanks: < LOQs for all analytes

All results reflect dry weight of material, based on % moisture of the sample.

All moisture and water activity analysis is determined by dewpoint measurement using an AQUALAB water activity meter.




Luke Emerson-Mason
 Laboratory Director
 11/17/2025

Confident LIMS
 All Rights Reserved
coa.support@confidentlims.com
 (866) 506-5866
www.confidentlims.com

